

Flush Mounted Tiger Teeth Installation Drawings

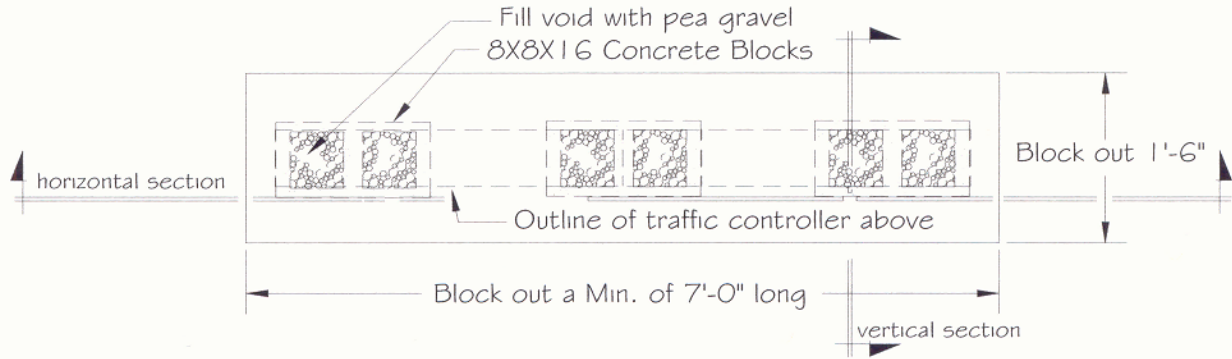


figure A - Plan view


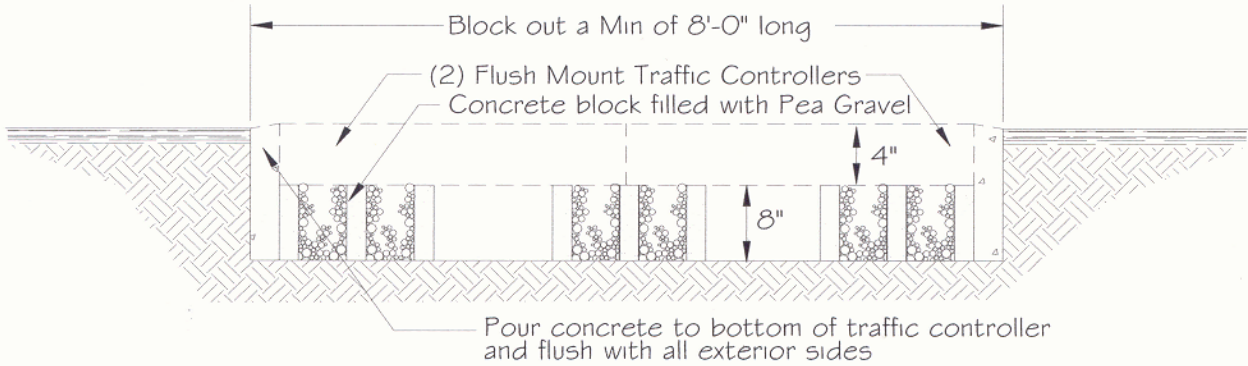


figure B - Horizontal section

Top of the Traffic controller should be approximately 1/2" to 3/4" above pavement (This will help prevent water from draining into container box)

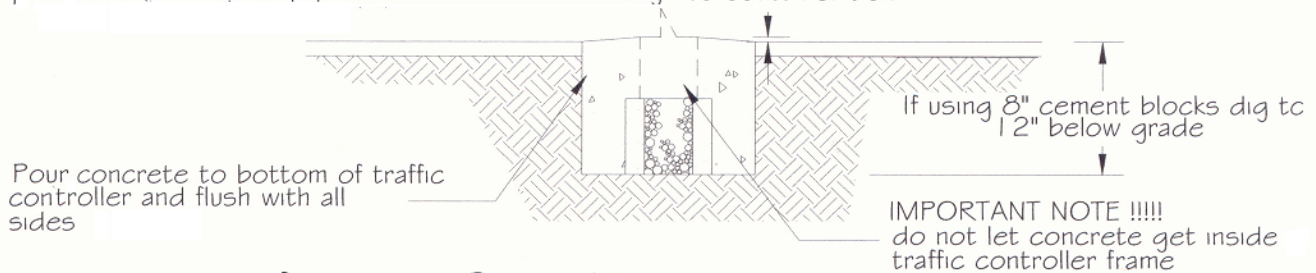

Pour concrete to bottom of traffic controller and flush with all sides

If using 8" cement blocks dig to 12" below grade

IMPORTANT NOTE !!!!!
do not let concrete get inside traffic controller frame

figure C - Vertical section